



MICRO FENCE SAFETY INSTRUCTIONS

- Be sure your router is **switched off** and is **unplugged** when attaching your **Micro Fence®**, and when inserting or removing bits or making adjustments.
- When attaching your **Micro Fence®** to your router, and frequently during use, **tighten all screws firmly**, including the adjusting screws. Failure to observe this practice could result in spoiled work or serious injury.
- **Always** use safety glasses, noise and dust protection when using your router.
- If your router isn't equipped with a trigger switch, consider using a foot switch, so that both hands can grip a knob or handle before the tool is energized, thus giving positive control.
- Use **sharp bits** specifically designed for your application.
- Don't use **Micro Fence®** for applications other than those illustrated in the instructions without first consulting **Micro Fence®** Technical Support.
- **Follow the safety instructions** that came with your router.
- Make **multiple passes** with your router if you have a large amount of stock to remove.
- If your application positions the router bit so that it will contact the secondary wooden fence, cut the fence to clear the bit.
- Work in a neat, **uncluttered** area.
- **Secure your work** to free both hands.
- Be sure your router's power cord is free so it won't hang up or be stepped on during use.
- To control starting torque, keep balanced and have a firm grip on your router when you start it
- Develop the habit of checking all mounting and adjusting screws before, and frequently during use to insure that the router's vibration has not caused loosening.
- Take it easy, keep your brass tight and enjoy your **Micro Fence®**.