

## The Warner Offset Router Base Adapter Kit


12970 Branford Street Unit M, Arleta, CA 91331 Phone 1-800-480-6427

Email: [microfence@microfence.com](mailto:microfence@microfence.com) Website: [www.microfence.com](http://www.microfence.com)

If you are among the woodworkers who prefer the added stability offered by the Pat Warner-designed Off-Set Router Base, your Micro Fence can be adapted to be used with it.


The additional thickness of the auxiliary base can be accommodated by installing our “**Warner Adapter Block.**”

This photo shows our **Warner Adapter Kit** installed and ready for use.

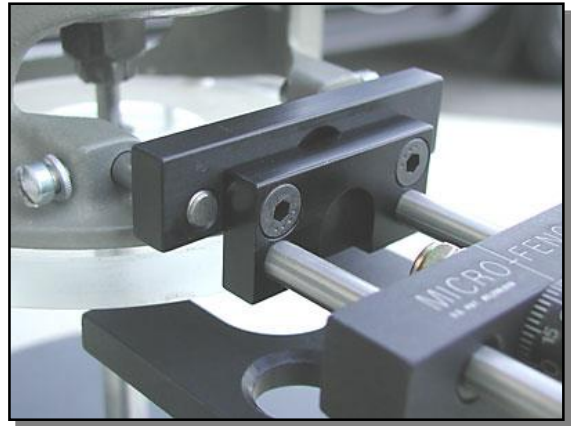

### The kit includes:

- # 1 One Warner Adapter Block
- # 2 Two 5/16x1/2" Low Head Cap Screws
- # 3 One 5/32 Allen Wrench  
One Rubber Pad (not pictured)

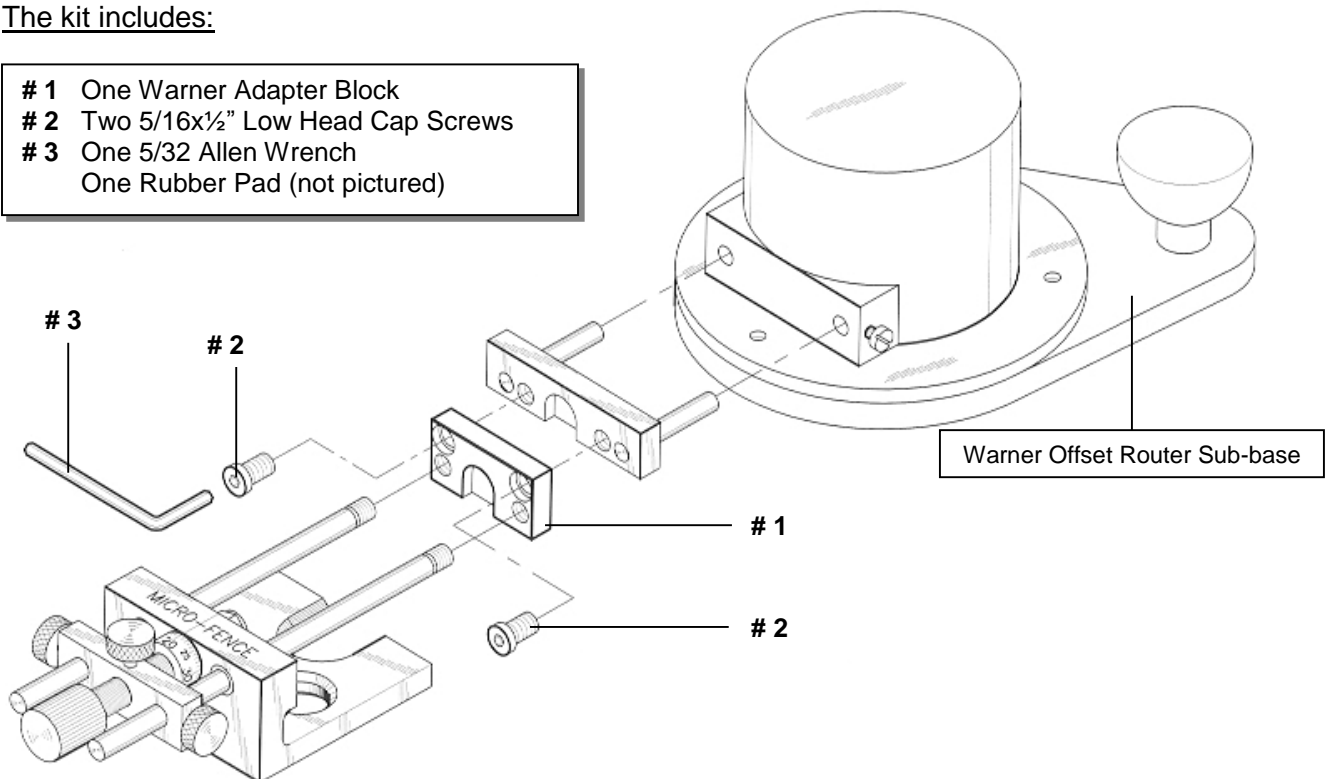

Remove the 7 or 12" guide shafts using the rubber pad, (and pliers if necessary), being careful not to scratch them. Install the block (#1) as shown in the exploded drawing above, and then re-install the stainless rods in the lower-positioned holes. This assembly will provide enough vertical clearance for the body of the Micro Fence to slide under the thicker sub-base.